

USING THE 12RLS REMOTE CONTROL

SETTINGS FOR HEAT

MODE.....HEAT
FAN.....AUTO
ECONOMY.....OFF
SENSOR.....OFF
LOW NOISE...OFF
SWING.....AS REQUIRED
HORIZ/VERT...AS REQUIRED
MIN HEAT.....Maintains 10C if you are away
POWERFUL.....to attain higher heat setting faster

SETTINGS FOR COOLING

MODE.....Cool
FAN.....Med/High
ECONOMY.....OFF
SENSOR.....OFF
LOW NOISE...OFF
SWING.....AS REQUIRED
HORIZ/VERT...AS REQUIRED
MIN HEAT.....N/A
POWERFUL..... to attain new temp faster

TO SAVE MONEY, ENERGY AND FRUSTRATION:

MODE – Don't set this to 'AUTO'. AUTO will switch back and forth between heating and cooling, and use more energy

FAN – Don't use super quiet because the unit doesn't run as efficiently with low air flow. The AUTO setting picks the most efficient speed for whatever your set temperature is.

ECONOMY – It won't save you money, it just makes less heat.

ENERGY SAVING – This is made for motels who have wasteful customers. It detects whether someone is in the room. You don't need this.

LOW NOISE – This is for condos. It makes the unit run at 10% efficiency. You don't need this.

TIMERS – These will complicate your life. Easier to turn your unit down at night and up in the morning.

MIN HEAT – Useful if you are away. Keeps your pipes from freezing. Reset by turning the unit off and then on and wait for it to reboot.

POWER OUTAGE - After a power outage the unit will return to the settings that were in place before the outage.